

Adjusting the trigger over travel

NOTE

The trigger over travel is set to minimum from the factory

1. Loosen the 1/4" brass jam nut. Insert a 5/64" allen wrench into the over-travel screw.
2. Look through the hole in the side of the trigger housing and pull the trigger and press down on the sear.
3. Turn the over-travel screw counter clockwise and observe the trigger moving away from the sear.
4. Turn the screw until the desired over travel is achieved and lock into place by turning the brass jam nut clockwise until it is tight against the trigger housing. (*Figure 34.*)
5. Test the setting by pulling the trigger and depressing the sear. Release the trigger.
6. Slowly release the sear and ensure the trigger has enough clearance to reset.

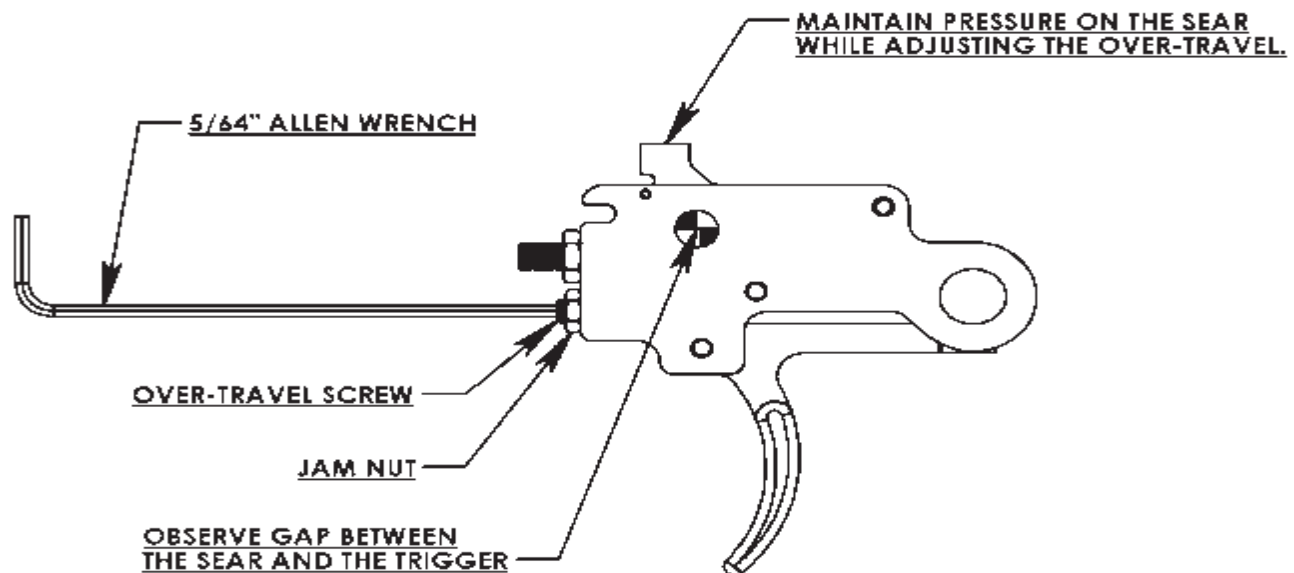


Figure 34.
(Adjusting the over travel.)