

Adjusting the trigger weight

Note

The factory setting is 2 / 2.5 pounds.

Loosen the 5/16" jam nut on the trigger-weight screw. Using a 1/16" allen wrench turn the screw counter clockwise. The minimum setting on the trigger should not go below 1.5 pounds. This is achieved by approximately one half of a turn on the trigger-weight screw. Hold the allen wrench and do not allow the screw to move and tighten the 5/16" nut. (*Figure 32.*)

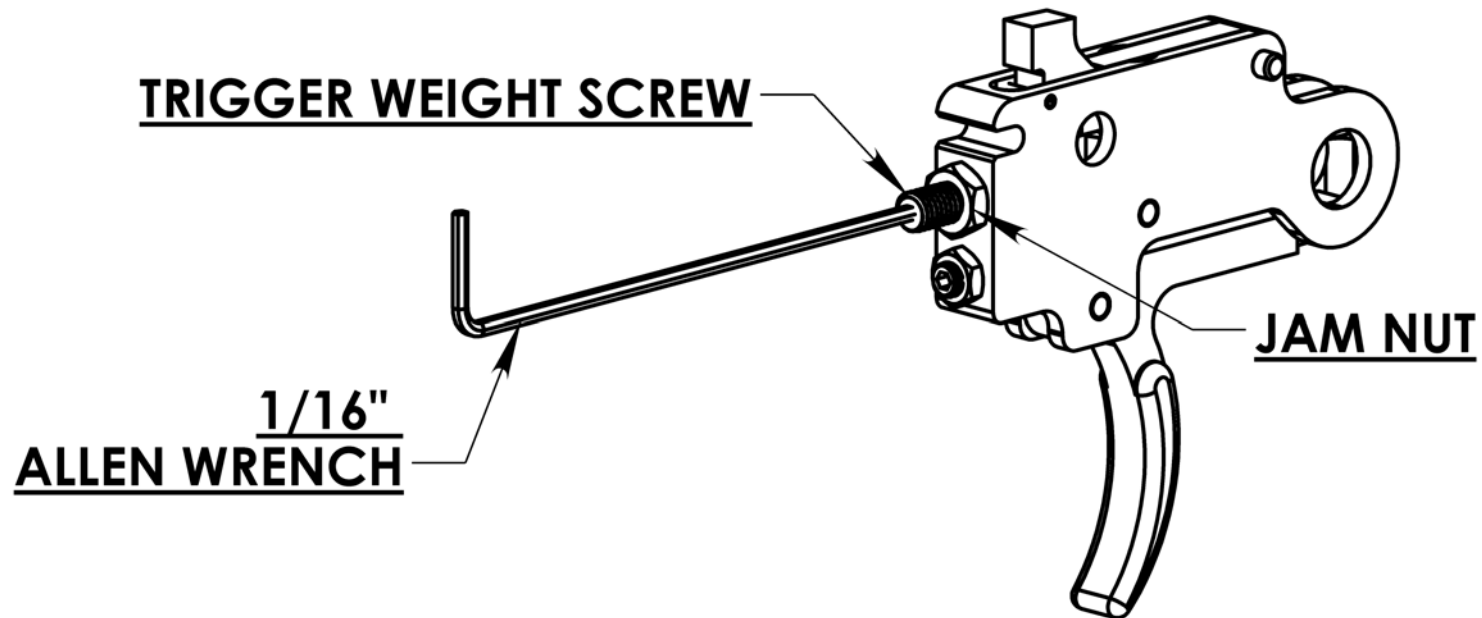


Figure 32.
(Adjusting trigger weight.)